


SP12 Parts Breakdown

Jacto SP12

Jacto SP12

Parts List

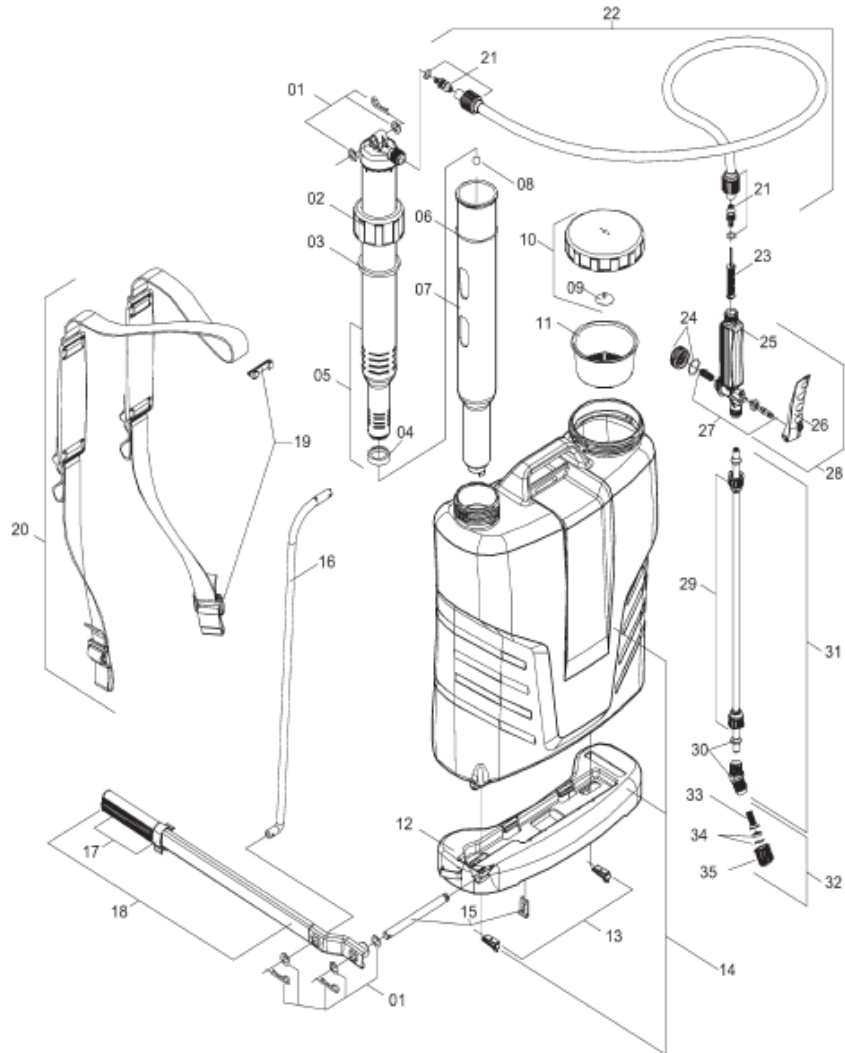

ENGLISH

N.	P/N	DESCRIPTION	Qty	N.	P/N	DESCRIPTION	Qty
1	924102	Washers and cotter pins set (repair)	1	28	1168419	Trigger valve assembly LP-3	1
2	1168408	Gasket holder SP	1	29	1168425	Screw cap	1
3	1168409	Gasket (felt)	1	30	635276	Elbow with cone packing	1
4	1168407	Piston cup (Santoprene)	1	31	1168423	Lance 601	1
5	1168406	Chamber with piston cup	1	32	427062	Nozzle JD12 assembly	1
6	1168404	O-ring ORi-135	1	33	1168545	Nozzle filter M40	1
7	1168405	Chamber cylinder	1	34	1168547	Nozzle JD12	1
8	1168410	Stainless steel ball 7/16"	1	35	1168546	Nozzle cap	1
9	1168542	Lid diaphragm	1				
10	1168411	Lid with diaphragm SP	1				
11	1168414	Strainer SP	1				
12	1168396	Tank base	1				
13	1168397	Base lock	1				
14	1168393	Tank SP 12 with lock	1				
14A	1168394	Tank SP 16 with lock	1				
14B	1168395	Tank SP 20 with lock	1				
15	883108	Axle with lock	1				
16	1168417	Pumping rod SP (black)	1				
17	495812	Handgrip assembly	1				
18	1168543	Lever assembly (black)	1				
19	1168539	Buckle and Strap lock	1				
20	1168400	Strap assembly with adjustment SP	1				
21	1168541	Nut S20	1				
22	1168403	Hose assembly SP	1				
23	1168418	Filter LP-3	1				
24	1168544	Trigger valve cap and O-ring ORi-119	1				
25	1168420	Trigger valve body LP-3	1				
26	1168421	Lever assembly LP-3	1				
27	1168422	Trigger valve need assembly LP-3	1				

LLM-329